


Security Safe Owner's Manual

X031ML, X041ML, X055ML, X075ML, X125ML

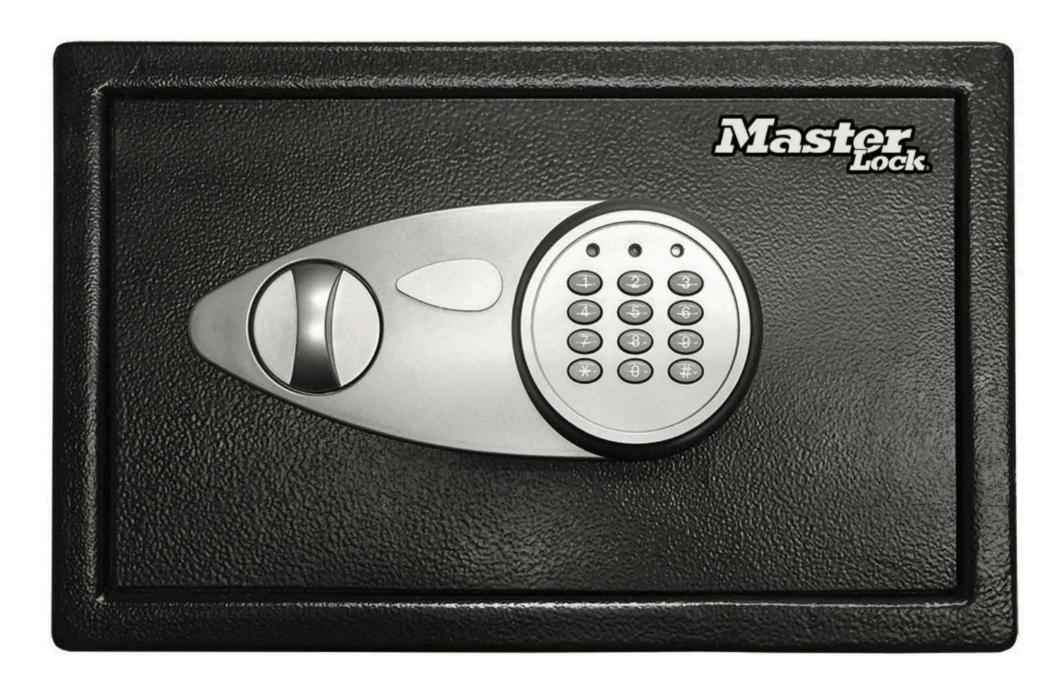

For Key Lock Safes

Your Master Lock product is equipped with a high security key lock. Two (2) keys are provided.

For Digital Combination Safes

Opening Your Safe for the First Time (Using the Override Key)

- Remove the cover located between the knob and keypad.
- Insert the override key provided and turn counterclockwise.
- Turn the knob clockwise to open the door.
- Turn key back clockwise to remove the key and replace the cover on the door.

Note: In an emergency, situation the safe can be opened using your override key. **DO NOT store your override key inside the safe.**

Installing the Batteries

- With the door open, remove the battery compartment cover located on the inside of the door by sliding the cover in the direction of the arrow.
- Install four (4) AA size alkaline batteries.

Note: Follow the polarity (+/-) markings in the battery compartment to ensure proper installation.

Slide the battery cover back into place.

Note: Do not use rechargeable batteries or any other type of non-alkaline battery. Do not mix old and new batteries. Do not mix alkaline and other battery types.



Using Your Security Safe

IMPORTANT: All security safe models initially work using the factory code 1-7-5-0-0 -#. It is highly recommended and important to the security of your valuables that you re-program the safe with a new user code. Once reprogrammed the factory code can no longer be used to open your safe.

Programming Your New User Code

- Open the safe's door and remove the battery compartment cover.
- Locate the button inside the battery compartment and press. The yellow LED light will go on.
- 3 Enter a new user code (between 2-8 digits) followed by the "#" key. The yellow LED light will go off to indicate the new code has been accepted and stored.



Replace the battery compartment cover.

Note: Always test a new code before storing any valuables inside the safe.

Unlocking Your Safe

- Enter your factory code or user code followed by #.
- The green LED light will go and remain on for 5 seconds.
- Within 5 seconds, turn the knob clockwise and pull open the door.

Locking Your Safe

- With the bolts retracted into the door, firmly close the door of the safe.
- Turn the knob in the counter-clockwise direction to secure your safe.